


# OPERATING INSTRUCTIONS

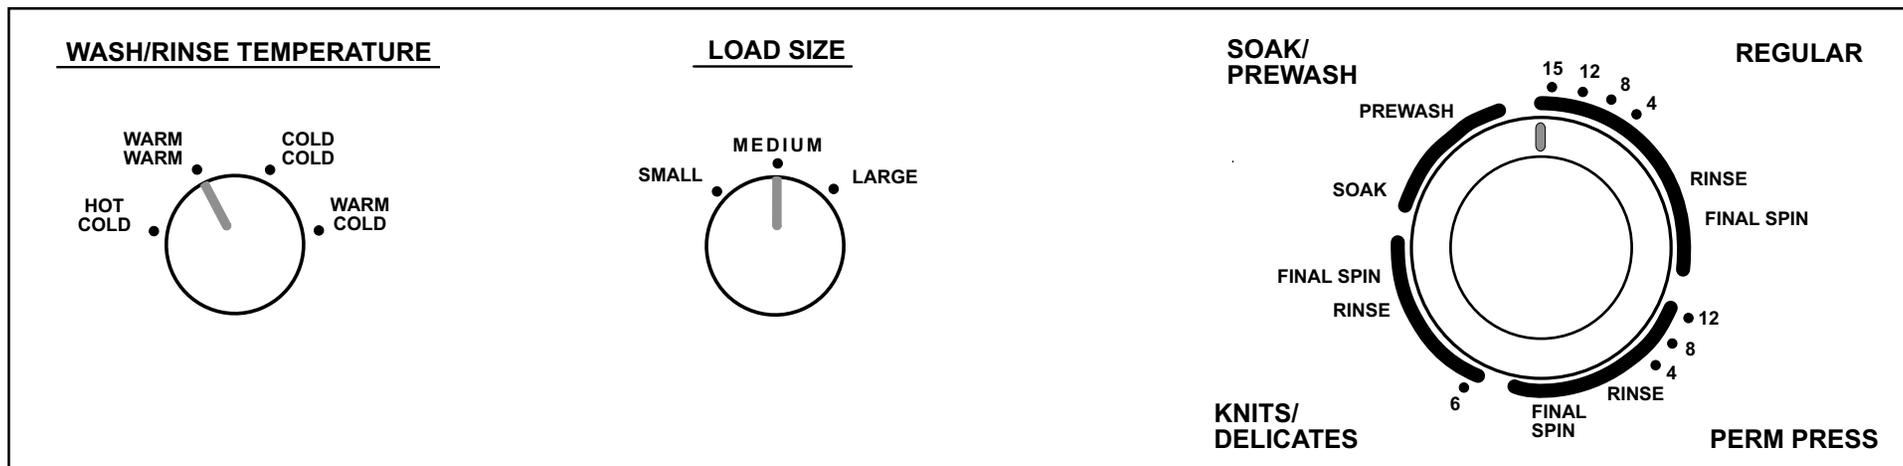

## Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.

4. Add the measured amount of detergent to wash tub before adding the laundry load.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser on some models, or during the final rinse.
8. Set cycle selector and washer controls according to type, size, and soil level of each load. Push in the cycle selector knob to the desired wash cycle. See **Cycle Selection** for cycle descriptions and **Control Setting Chart** for suggested cycle settings.
9. Close lid and pull cycle selector knob to start washer. The washer will operate with the lid open; however the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

10. Remove items at end of cycle. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

## Cycle Selection

Always follow instructions on fabric care labels. Check the **Control Settings Chart** if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

### Regular Cycle

Provides up to 15 minutes of wash agitation for most fabrics.

## Cycle Selection (continued)

### Perm Press Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

### Knits & Delicates Cycle

Provides up to 6 minutes of wash agitation for the gentle care of knit and delicate items.

### Soak & Prewash Cycle

- **Soak** — The Soak setting can be used to treat heavily soiled or stained items. It provides 2 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle.

Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.

- **Prewash** — When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing.

During Prewash, the washer will agitate the load for 2 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

#### Note:

- The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.
- Soak and Prewash should always be followed by a complete wash cycle using the recommended amount of detergent.

## Controls

Always follow instructions on fabric care labels.


**WASH/RINSE TEMPERATURE** determines water temperatures for washing and rinsing.

**LOAD SIZE** determines the amount of wash and rinse water used for the wash load.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and time setting. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle and Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular - 15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular - 8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular - 4 to 8
<b>PERMANENT PRESS</b> White or Heavily Soiled	Hot or Warm	Cold	Perm Press - 8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press - 4 to 8
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits & Delicates - 6 Knits & Delicates - 6
Washable Woolens	Warm	Warm	Knits & Delicates - 6

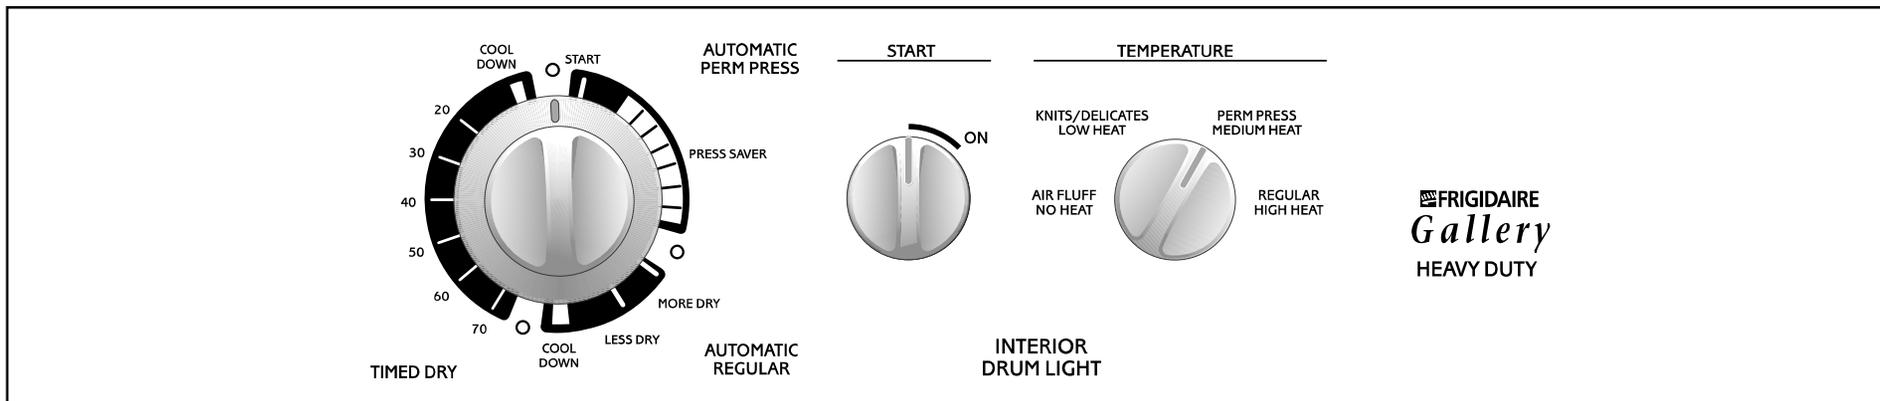

**Versión en español**  
 Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 131580900.  
 Spanish Owner's Guides  
 Frigidaire Company  
 P. O. Box 9061  
 Dublin, Ohio 43017-0961

**Before Operating Your Dryer**  
**Read your Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best drying results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your owner's guide before operating this appliance.

## Operating Steps

Read **Drying Procedures** in your **Owner's Guide**. It explains these operating steps in detail.

1. **Prepare items for drying.**
2. **Check that lint screen is clean and in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.
4. **Close the dryer door.**
5. **Set Temperature controls.**
6. **Turn cycle selector clockwise to desired setting.**
7. **Start dryer.** Turn Start control clockwise to ON. Hold for 1-2 seconds and release.
8. **A signal will sound when the cycle ends.**
9. **Remove items immediately and hang or fold.**
10. **Clean lint screen after every load.**

## Temperature Selection


Always follow directions on fabric care labels.

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Air Fluff-No Heat setting only.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **KNITS/DELICATES-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Timed Dry cycle.

**AIR FLUFF-NO HEAT** setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

*(continued, reverse side)*

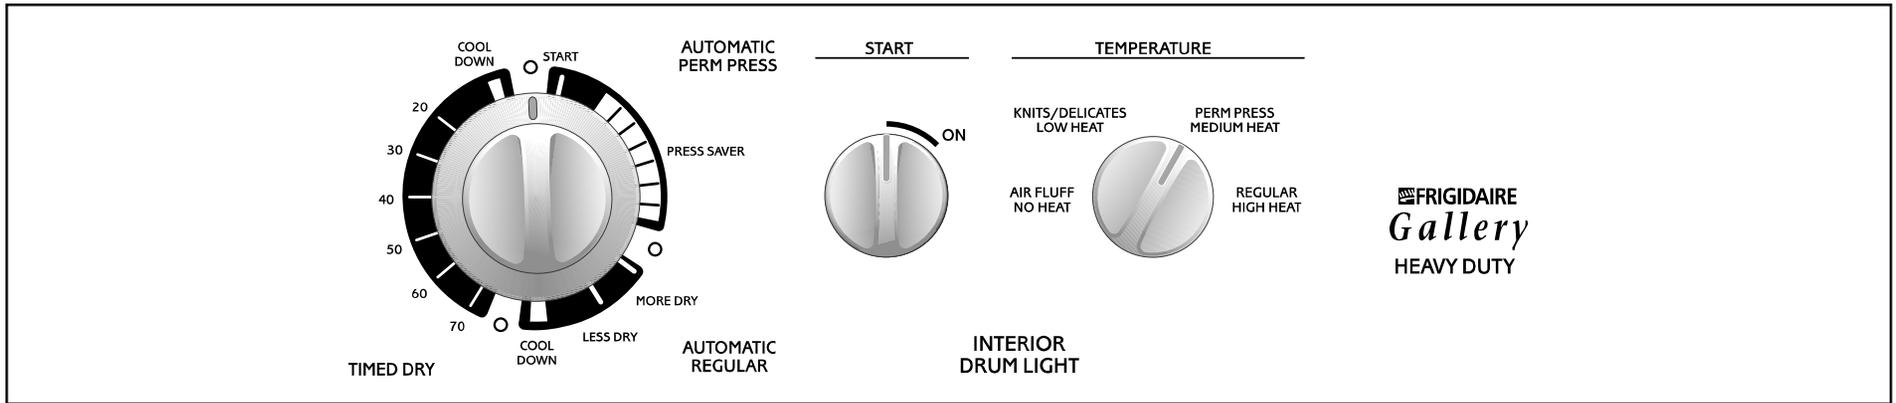

## Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

### Automatic Perm Press Cycle

This cycle is best for permanent press, knit and delicate items. Drying time is determined automatically at the temperature selection of your choice.

- Medium heat is suggested for permanent press items.
- Low heat is suggested for knit and delicate items.

If the dried load cannot be removed promptly, the cycle selector will advance to the **Press Saver** setting.

Unheated tumbling continues during Press Saver for 40 minutes to help reduce wrinkling.

The cycle signal will sound briefly every 5 minutes as a reminder to remove the load.

### Automatic Regular Cycle

This cycle is best for cotton items that can be tumble dried.

Drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

### Timed Dry Cycle

This cycle provides up to 70 minutes of drying time at the temperature selection of your choice.

## Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).